

H160

High-voltage brushless motor



INPUT VOLTAGE

300-900 V DC

RATED INPUT

40A

MOTOR MASS

9500±100g

Quality engineering. Service life up to 5000 hours.

Actual life depends on load, temperature, installation and maintenance.

01 / SPECIFICATIONS

Specifications and scope

For brushless motor systems with 300-900 V DC input. This manual provides product, installation and operating guidance.

No.	Parameter	Specification
01	Battery configuration	72S-214S
02	Rated input current	40A
03	No-load current (400V)	12A
04	Maximum current(15KV)	221A±2A
05	Internal resistance (temperature-dependent)	1.3Ω±0.1Ω
06	Motor mass	9500±100g
07	Rotation (shaft-end view)	CW / CCW
08	Operating temperature	-10 °C-65 °C
09	Storage temperature	-10 °C-50 °C
10	Storage humidity	≤85%

Test and inspection conditions


Ambient test temperature: 25 ± 5 °C. Temperature rise: ≤65 °C. No-load vibration velocity: ≤1.8 mm/s.

Dielectric test: source notation DC1000 / 5S / 5mA, between winding and housing, with no flashover.

Factory checks cover supply specification, no-load current, maximum current and resistance. Rated current is sample-tested on a dynamometer; mass is sample-checked with a scale.


02 / INSTALLATION

Dimensions and wiring

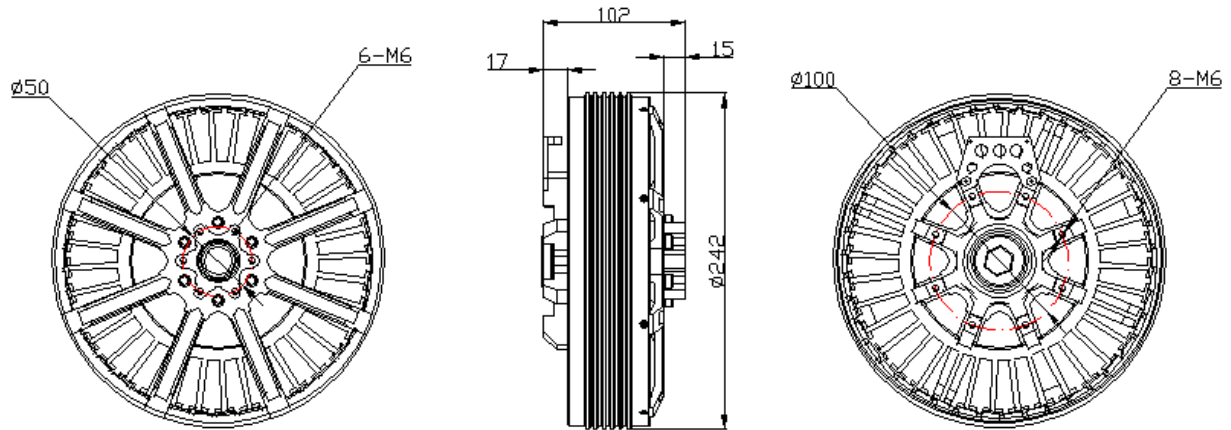

Mounting holes, outline and shaft dimensions are shown above. Dimensions and symbols follow the original drawing.

Changing rotation direction

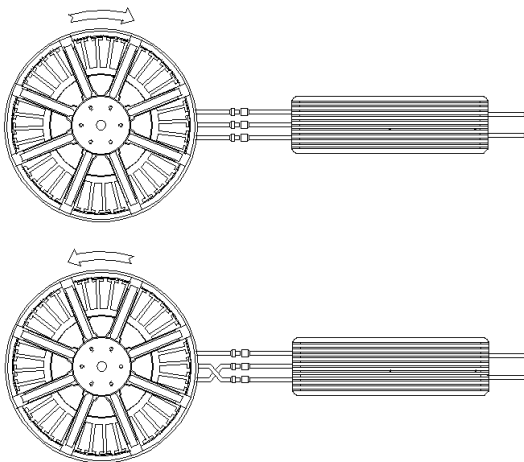

1. Confirm the rotation required by the propeller.
2. Leave the propeller off and connect the three motor phase leads to the ESC outputs.
3. Check rotation safely. To reverse it, isolate power, then exchange any two phase leads.
4. Install the propeller only after confirming the direction.

03 / PERFORMANCE 01

300 V / 6015 propeller

KV: 15 | Mass: 9500 g | Propeller: 6015 | Test voltage: 300 V

No.	Current / A	Input / W	Thrust / g	Thrust eff. / g/W	Throttle / %
1	4.0	1210	12058	9.97	15
2	7.3	2200	20978	9.54	21
3	13.8	4125	30502	7.39	28
4	19.6	5885	42372	7.20	35
5	27.5	8250	53945	6.54	42
6	43.1	12925	72211	5.59	48
7	55.0	16500	88061	5.34	55
8	64.2	19250	97020	5.04	61
9	82.1	24640	107910	4.38	68
10	92.4	27720	119790	4.32	75
11	108.7	32615	130680	4.01	81
12	130.5	39160	132660	3.39	87
13	154.0	46200	145530	3.15	93
14	183.3	55000	151470	2.75	96
15	221.8	66550	156420	2.35	100

Test data are retained row by row from the source. The curve plots the listed input power and thrust. Test points do not establish continuous-duty ratings. Propeller notation follows the source.

03 / PERFORMANCE 02

300 V / 5195 propeller

KV: 15 | Mass: 9500 g | Propeller: 5195 | Test voltage: 300 V

No.	Current / A	Input / W	Thrust / g	Thrust eff. / g/W	Throttle / %
1	5.1	1540	12058	7.83	20
2	11.0	3300	21067	6.38	26
3	18.3	5500	31819	5.79	32
4	28.2	8470	42778	5.05	38
5	33.0	9900	49015	4.95	44
6	42.5	12760	60766	4.76	50
7	53.7	16115	72131	4.48	56
8	58.7	17600	83160	4.73	61
9	64.9	19470	91080	4.68	67
10	75.2	22550	96030	4.26	73
11	95.7	28710	111870	3.90	79
12	117.3	35200	118800	3.38	85
13	139.3	41800	122760	2.94	91
14	161.3	48400	128700	2.66	95
15	201.7	60500	130680	2.16	100

Test data are retained row by row from the source. The curve plots the listed input power and thrust. Test points do not establish continuous-duty ratings. Propeller notation follows the source.

04 / OPERATION & CARE

Safety, operation and care

Installation, wiring and commissioning require competent personnel. Isolate power and confirm safe discharge before changing connections.

- 01** Supply voltage, service life and environmental conditions can lead to short circuits, fire or smoke. Provide appropriate electrical protection and guarding in the complete system. Stop use and contact technical support if safety is in doubt.
- 02** Do not damage windings, leads, edges or insulation during installation and wiring. Damage can cause electric shock, burnout or fire. Never touch rotating parts while energized.
- 03** This motor is intended for integration into other equipment. It does not carry a complete set of machine-level warning labels. The integrator must provide the necessary labels and guarding.
- 04** Keep the worst-case bearing temperature below the allowable upper limit of 100 °C. If it cannot be measured, verify service life in the complete system. Do not maintain a locked rotor or sustained high bearing temperature.
- 05** For custom speed control, verify the voltage range, load variation and control strategy. Check for abnormal noise, overheating and stalling.
- 06** Mount the motor correctly. Incorrect mounting can cause noise and vibration and shorten bearing life.
- 07** Do not lift or carry the motor by its leads or shaft. After a drop or equivalent impact, stop use and inspect for insulation and bearing damage.
- 08** Do not disassemble the motor. Safety and other performance are not assured after unauthorized disassembly.
- 09** Avoid corrosive or harmful gases and substances. The source lists H₂O, SO₂, NO₂, Cl₂, and silicone-, cyano- and phenol-based substances. Check compatibility with materials and conditions inside the complete machine to prevent corrosion and reduced life.
- 10** Store away from harmful gases at -10 to 50 °C and no more than 85% relative humidity. The source specifies sealed storage for up to six months under normal temperature and humidity conditions.

05 / TECHNICAL SUPPORT

Specification notes and support

- 01** The integrator must confirm compatibility with the complete machine in structure, dimensions, service life, noise, vibration and performance.
- 02** Operation outside the specified limits is outside the original specification guarantee.
- 03** Contact technical support before changing the machine specification or using the motor in another product.
- 04** Specification changes affecting performance or characteristics require samples and verification against mutually confirmed documents before implementation.
- 05** Components may be adjusted for performance improvements while meeting agreed specifications. Record critical delivery requirements in the mutually confirmed documents.
- 06** Agree in advance on any necessary requirements not addressed in this manual.
- 07** Resolve compatibility issues by mutual agreement using the confirmed specification documents as the basis.

Business enquiries

Product selection · Project enquiries · Technical support

H160



Zhuhai Shuangjie Technology Co., Ltd.

ADDRESS

35 Jinzhou Road, Jinding, Xiangzhou District, Zhuhai, Guangdong, China

CONTACT

Mr. Liu

PHONE

+86 18688194199

EMAIL

lhc1983@gmail.com

Quality engineering. Service life up to 5000 hours.

Actual life depends on load, temperature, installation and maintenance.